

Controller Setup



Elitech Refulgence



Set Button

Enters setting mode.



Reset/Exit Button

Exits setting mode.



Up Arrow

Scrolls temperature up.



Down Arrow

Scrolls temperature down.



Flashing Snowflake

The Chiller is calling for cooling and waiting out the two minute time delay.

Steady Snowflake

The Chiller is on and cooling water in order to reach its set point.

To adjust the temperature set point:

1. Press and hold SET button (for 5 seconds) until the screen changes to "St" then release the SET button.
2. Press SET one more time and release.
3. Now, using the UP or DOWN arrow buttons, select your desired temperature.
4. Press SET button once more to save your settings.
5. Press RESET/EXIT (Rst) button to exit settings.