


# Controller Setup

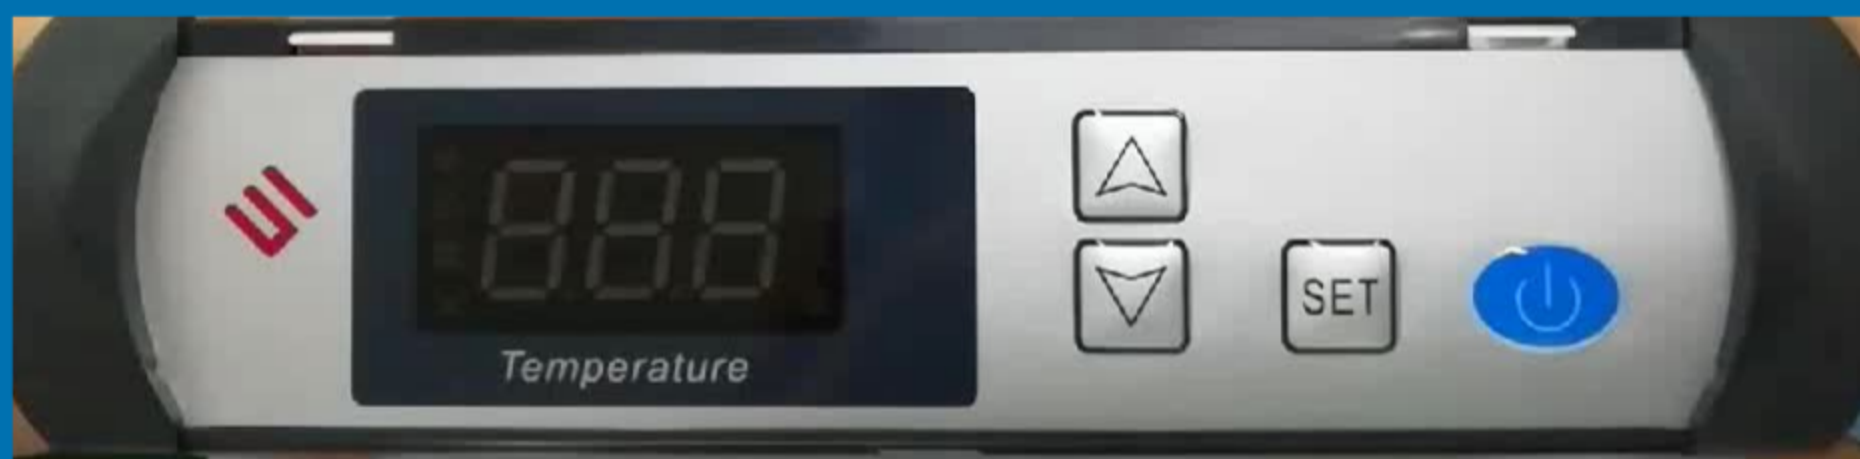

## Set Button

Enters setting mode.



## Power Button



## Up Arrow

Scrolls temperature up.



## Down Arrow

Scrolls temperature down.

## To adjust temperature set point:

1. Press SET button, the set temp is displayed & flashes.
2. Press Up/Down arrow to modify & store the temp.
3. Press SET button to exit the adjustment.

## Power On / Off

- Press power button for 3 seconds " - - - " Will be displayed - The unit is now off. (The pump is not effected, it will reman on regardless if the controller is on.
- Press power button for 1 second. The temperature is displayed, and the cooling process will begin once the startup delay has passed.

To Power off the entire unit, you will need to unplug the chiller.

## "Working light" Explanation

While cooling, LED light is lit.

When goal temp is met, LED is off.

During the startup delay, LED is flashing.